

Wiring Instruction

I . Packaging:

Every package contains: 1 four-pin motor wire, 1 two-pin Italy mode wire, 1 wire composed of 2 two-pin China mode wires, the length of every wire is $11 \pm 0.25\text{m}$; 1 two-pin threshold switch wire or 1 threshold switch wire and emergency switch wire composed of 2 two-pin wires, the length of every wire is $5 \pm 0.25\text{m}$.

II . Details:

1. Four-pin motor wire is a white RVV, and it is connected to four-pin navigation plug. The color of four pins is green, red, blue and yellow&green. Wiring instruction: the green, red and blue wires are connected to the power supply wires of motor, the yellow&green wire is connected to GND.
2. Italy mode wire is a white RVV, and it is connected to six-pin navigation plug. The color of four pins is red and blue. Wiring instruction: the red and blue wires are connected to the power supply wires of Italy valve.
3. China mode wire is a white RVV, and it is connected to six-pin navigation plug, composed of 2 two-pin wires, the wire color of one is brown and blue, the wire color of the other is red and blue.

Wiring instruction: the brown and blue two-pin wire is connected to the power supply wires of China panel valve.

the red and blue two-pin wire is connected to the power supply wires of China platform valve.

4. Threshold switch wire is a white RVV, and it is connected to four-pin navigation plug. The color of four pins is red and blue.

Wiring instruction: the red and blue two-pin wire is connected to the threshold switch.

The wire of threshold switch and emergency switch is a white RVV, and it is connected to four-pin navigation plug, composed of 2 two-pin wires. The wire color of one is yellow and blue, the wire color of the other is red and black.

Wiring instruction: the yellow and blue two-pin wire is connected to the threshold switch.

the red and black two-pin wire is connected to the emergency switch.

5. Instruction of pin inserting:

- a) Please use wire stripper to remove $20 \pm 2\text{mm}$ peel of the core wire, notice that don't snip the multi-strand copper wire inside the core wire with several colors.
- b) Then cover the pin.
- c) Please use needle nose pliers to clamp the tube of the pin.

Tel: 0512-53108586

Fax: 0512-53115285